

ULTIMATE CAROUSEL

Assembly and fitting instructions


To fit 900mm x 900mm diagonal corner base unit. Use +45° angled door hinges.

Prepare drillings for door hinges.
DO NOT FIT DOORS AT THIS STAGE.
NOTE: 60mm top and bottom centers for all hinges.

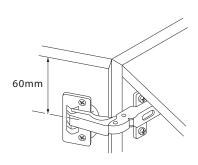

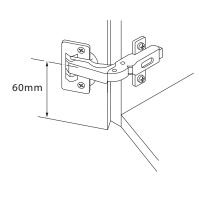



2 Fit side frames to top and bottom beams.

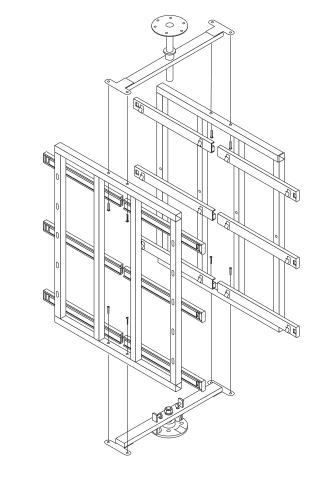


Mark base unit for fitting carousel.

Find mid point of opening and construct a pencil 'mitre line' from front to the rear corner and along that line draw circle and center line.

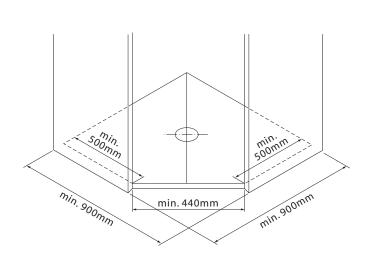


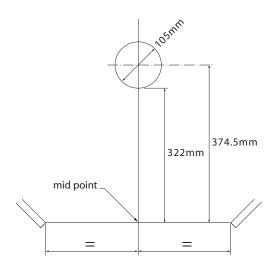


Insert carousel frame into base unit and align bottom mounting disc with pencil circle. Extend runners and adjust carousel position to ensure equal measurements between runners and cabinet sides.

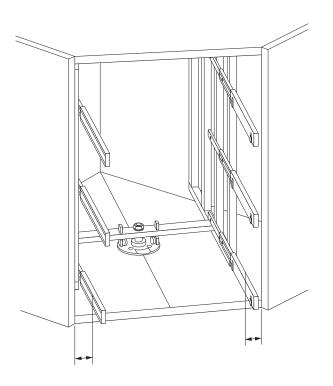


Mark and drill for top and bottom mounting discs. Fit screws.

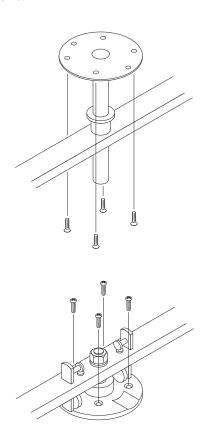

6 Fit baskets.
Carousel should turn 360° without fouling when baskets are fully retracted.

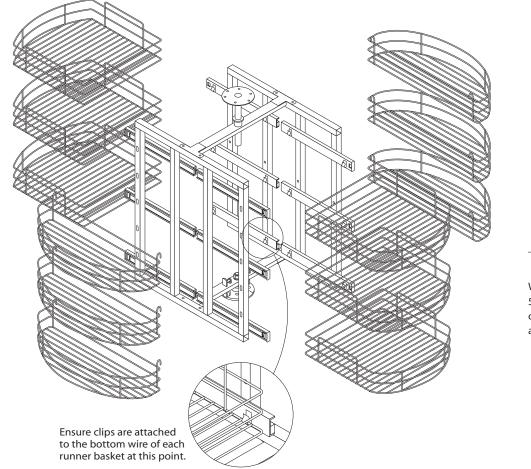

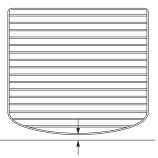

When retracted there should be 5-10mm clearance between front of basket and edge of base/top and inside of door face.